

# JVC

GB

Instruction Manual

32" LED Smart HD TV

LT-32C690(A) / LT-32C691(A)



prime video

NETFLIX

HD TV

dts  
TruSurround

dts-HD

FreeviewPlay

DOLBY  
AUDIO

HDMI  
HIGH-DEFINITION MULTIMEDIA INTERFACE

The TV Controller should do everything you need.

There are Freesat stations which as well as providing TV stations offer national and local radio stations. You can view a full list of stations by pressing the menu button [G] (number 10 on the diagram) above the OK button on the left.


The main catch-up stations can be accessed by pressing the HOME symbol.

You can access both Netflix and Prime by pressing the buttons below BACK

## 2 Preparation

### Remote Control

- ⏻**  
Switch the TV between on and standby mode.
- SOURCE**  
TV - BACK AV - HDMI 1 - HDMI 2 - YPbPr - VGA/PC.
- 0-9 Number Button**  
• Press to select a programme. (TV / RADIO mode)
- LANG.**  
Selects the Current Language menu.  
• Select Audio language or Subtitle language.
- TEXT**  
Press to enter teletext if available.
- MUTE**  
Mute and restore the sound.
- V+ / -**  
Adjust the volume.
- P+ / P-**  
Press to select the next channel up or down the channel list.
- HOME**  
Display the main menu.
- PG** (Programme Guide)  
Press to view the Programme Guide.
- i (info)**  
Press to see programme information in TV mode.
- OK / ◀▶**  
• Press OK to select or save a setting in menus.  
• Press OK to select the Channel list while watching TV.  
• ◀▶ Allows you to navigate the OSD menus and adjust the system settings to your preference.
- BACK**  
Press to move backwards through menus.
- EXIT**  
Press to exit a menu.
- Play**  
Press to enter Freeview Play (internet connection required).
- prime video**  
Press to enter prime video (internet connection required).

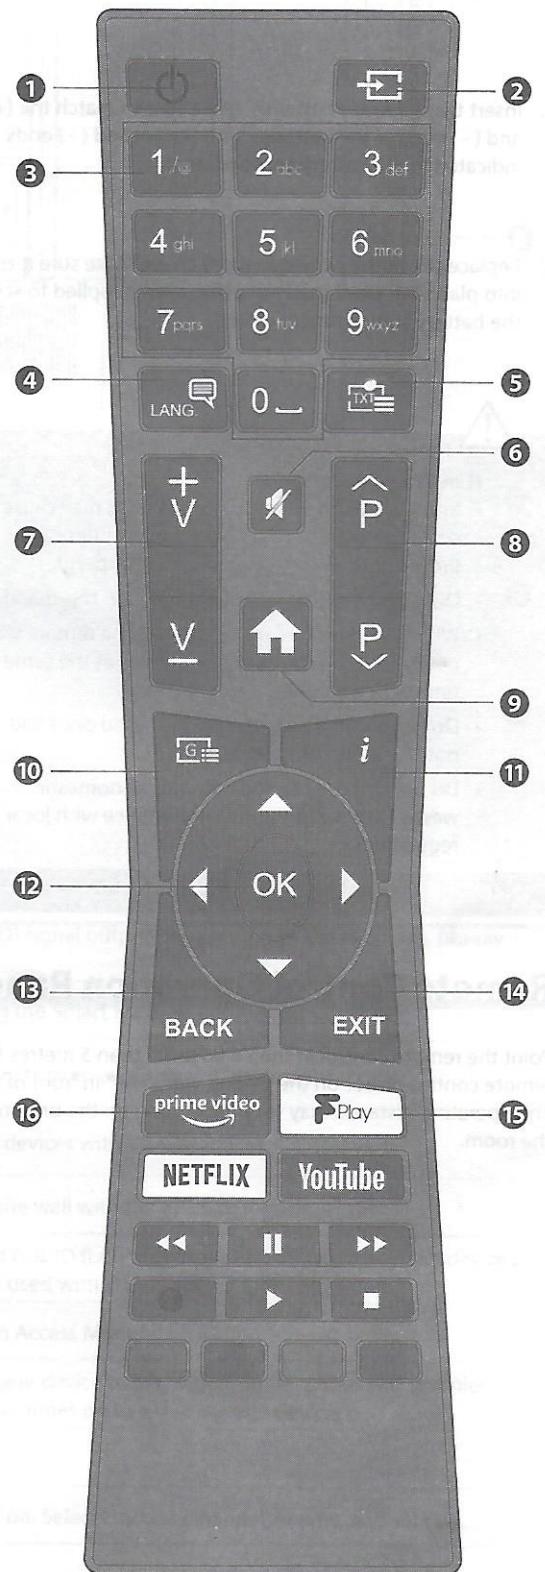

**17. NETFLIX Button**

Connects to Netflix for viewing online TV shows and films (internet connection required).

**18. YouTube**

Press to enter YouTube (internet connection required).

**19. PLAYBACK and RECORD buttons**

- ● starts a recording, continue to press will add more recordings.
- ► plays a recording.
- || pauses a recording and starts timeshifting in TV mode if you have a hard drive attached to the USB port.
- ■ stops a recording.
- ◀▶▶▶ searches forwards and backwards when viewing a recording.


**20. COLOURED BUTTONS**

Access the TELETEXT items (TV mode) or menu options.

**TELETEXT (RED)**

Accesses TELETEXT.

*21 Prime*

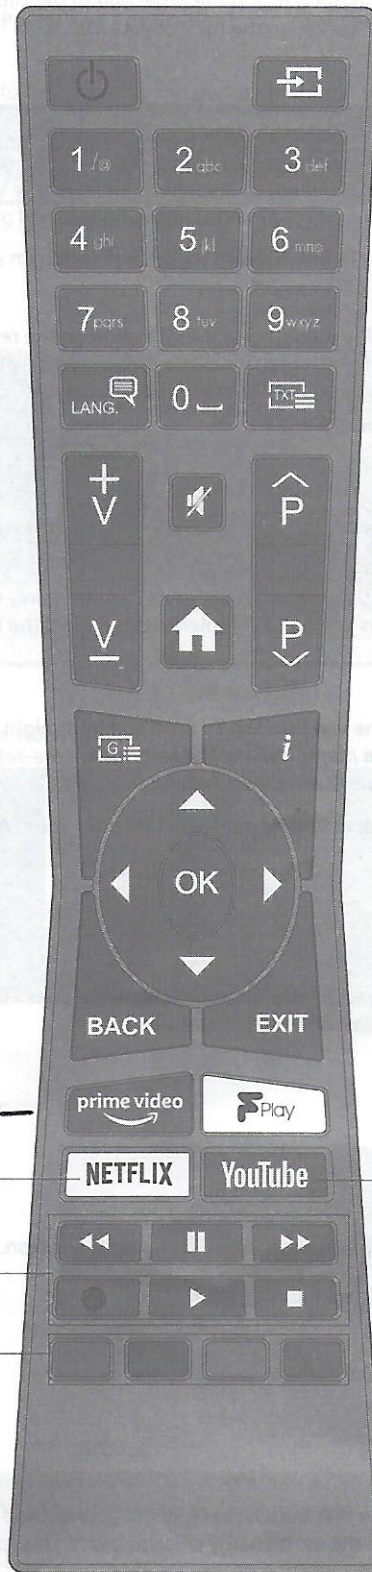

*21* —

17

18

19

20